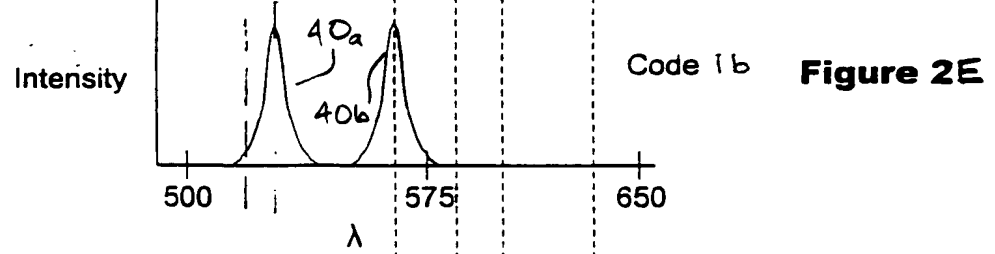
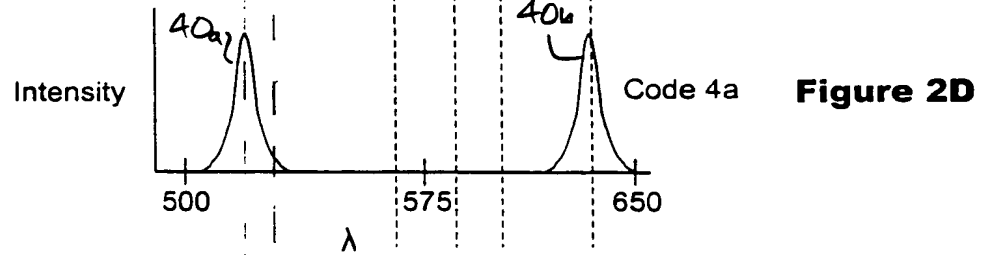
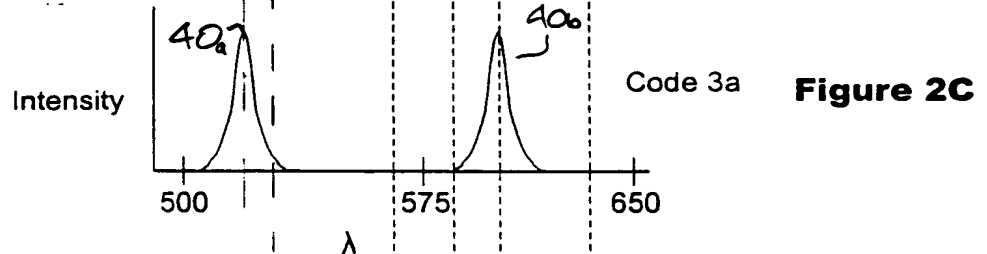
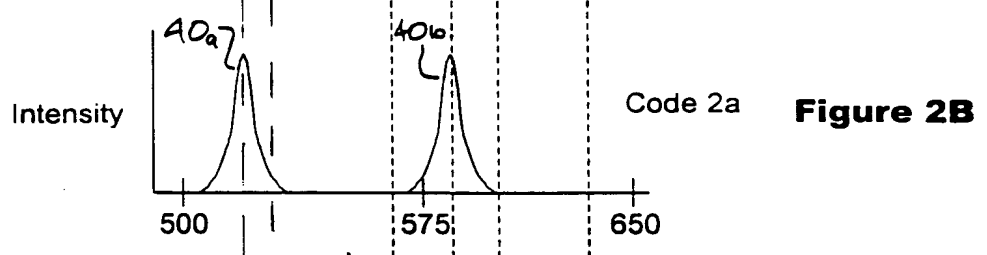
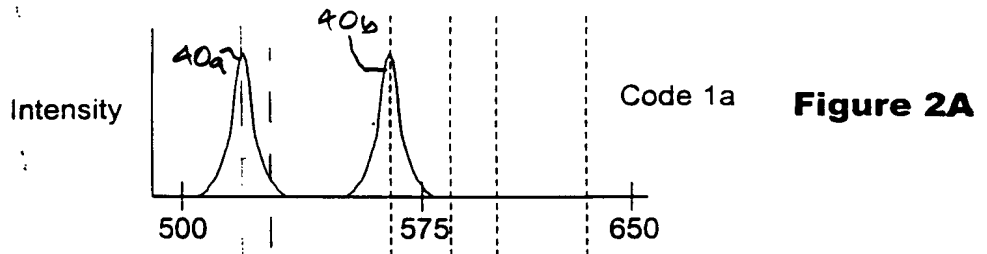
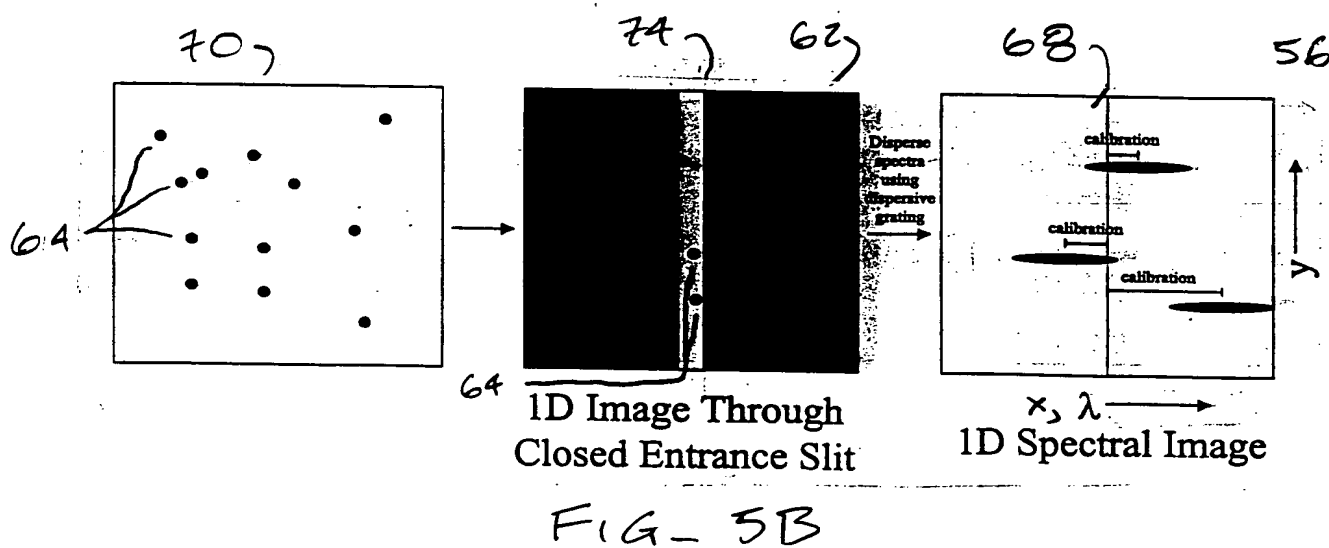
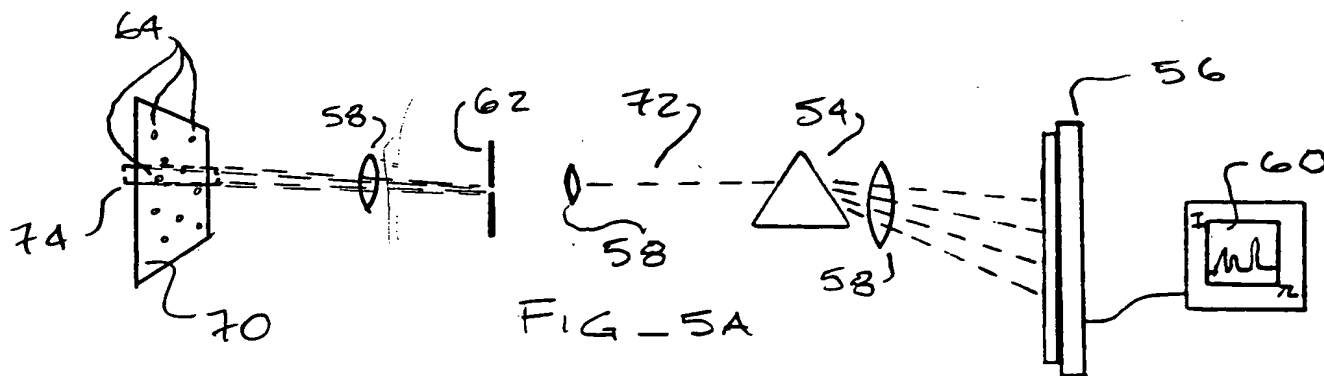
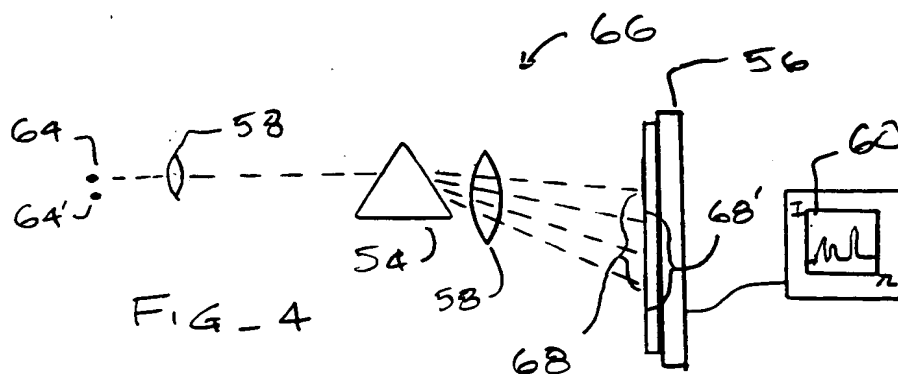
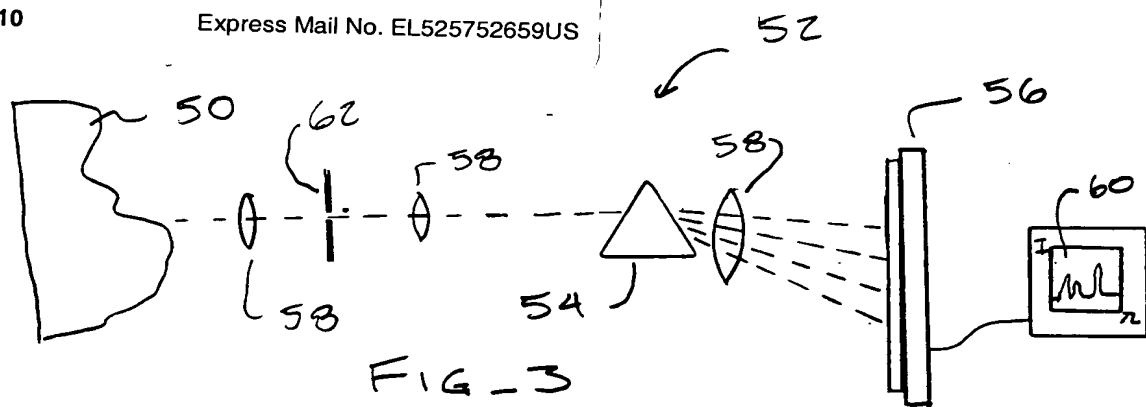
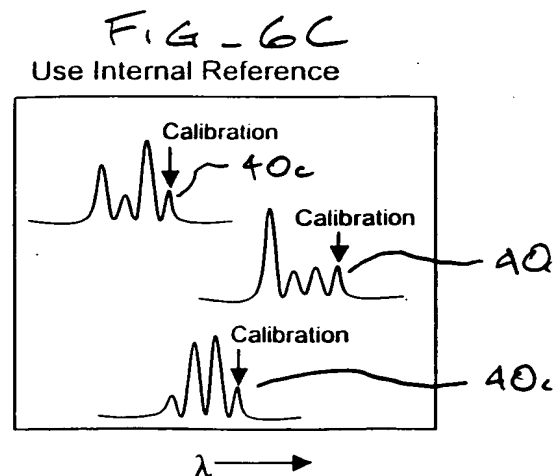
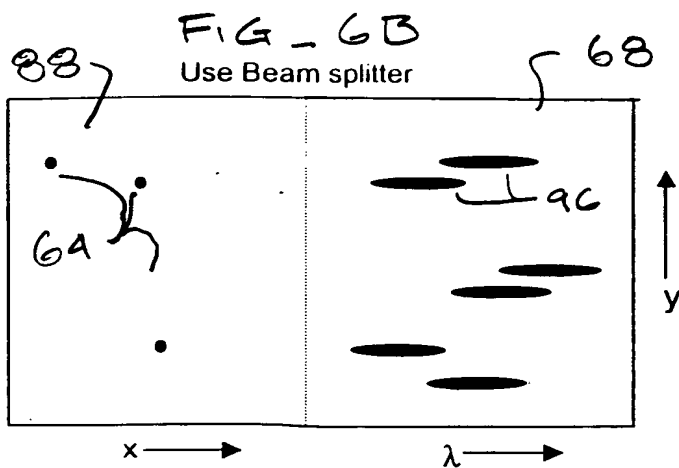
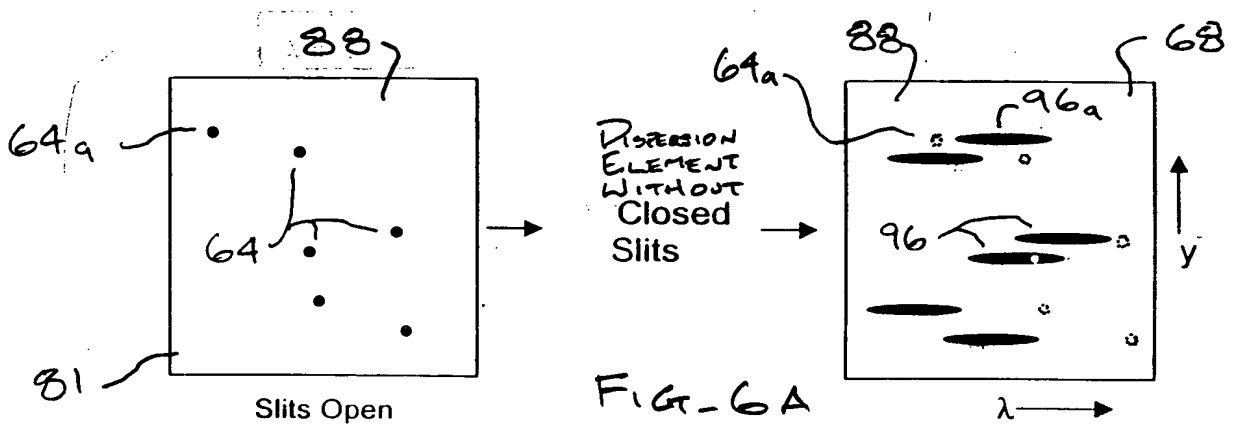
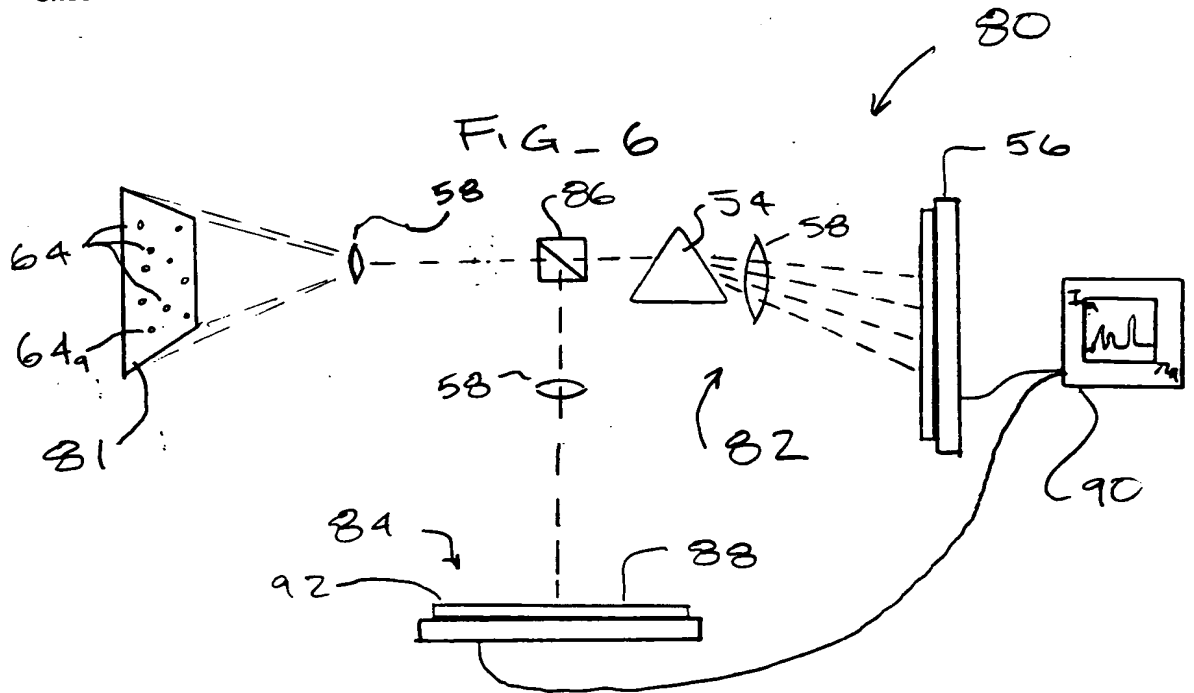


FIG - 1A







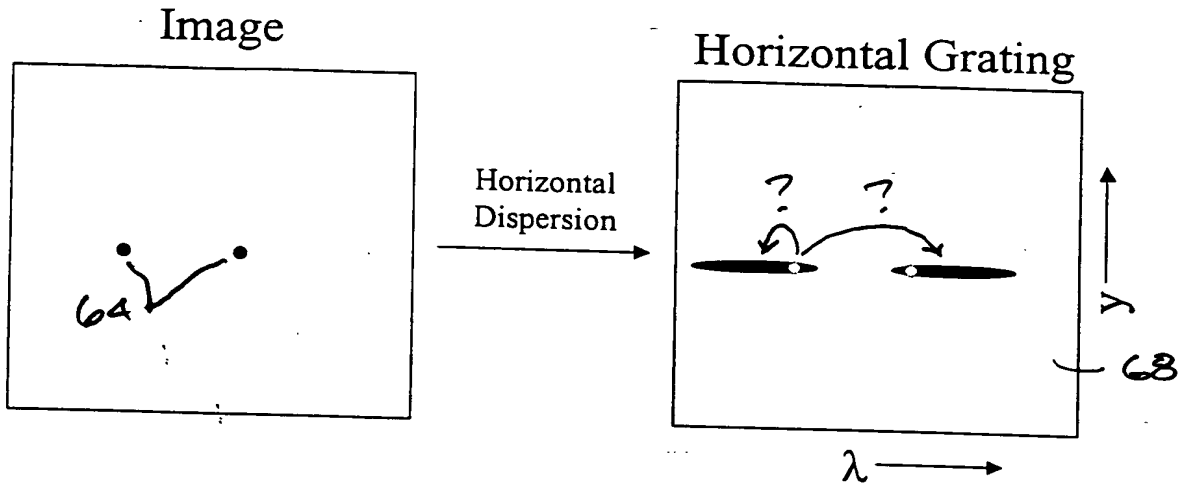


FIG 7A

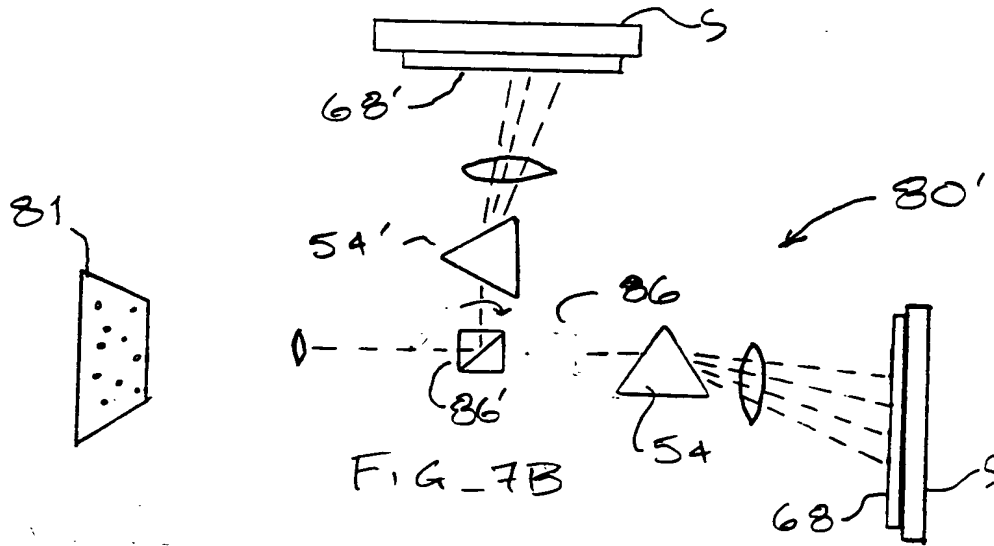


FIG-7B

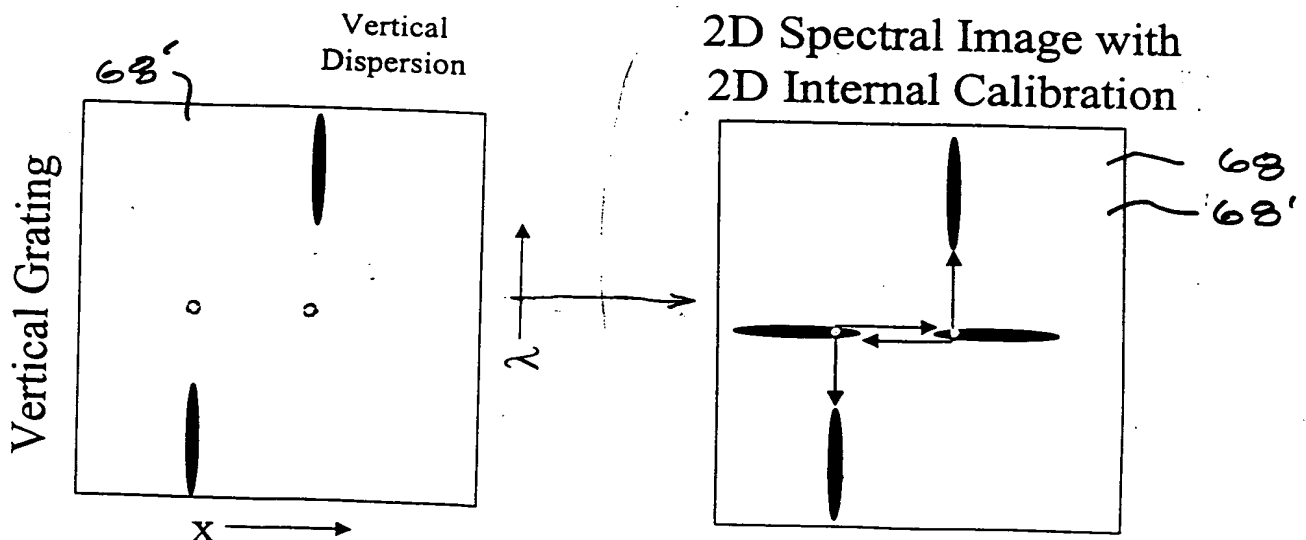


FIG-7C

[illegible]

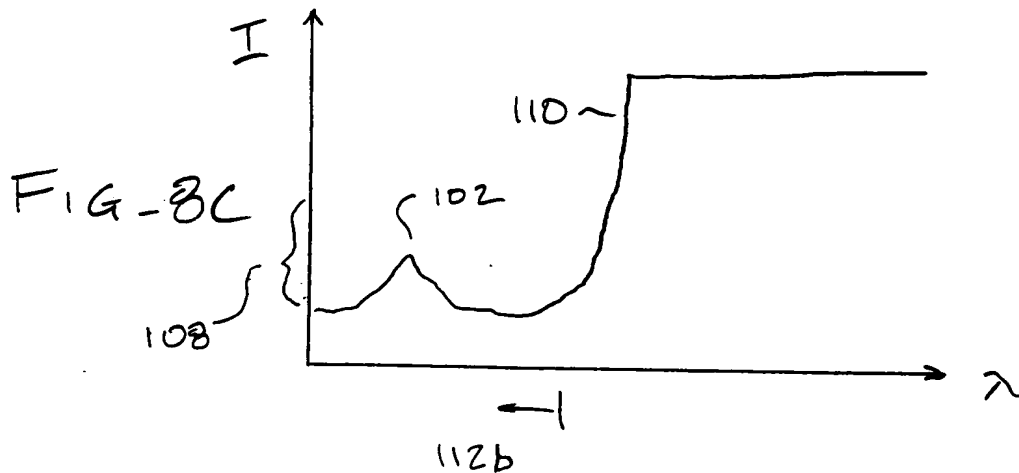
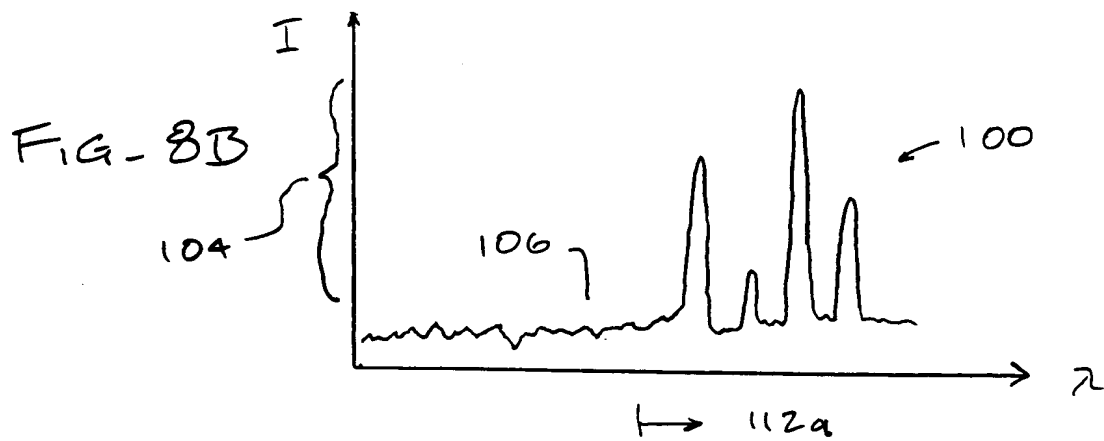
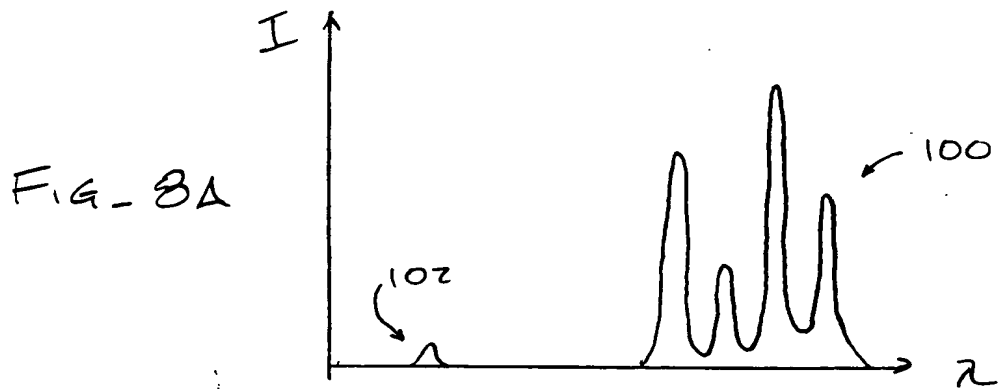




FIG-10B



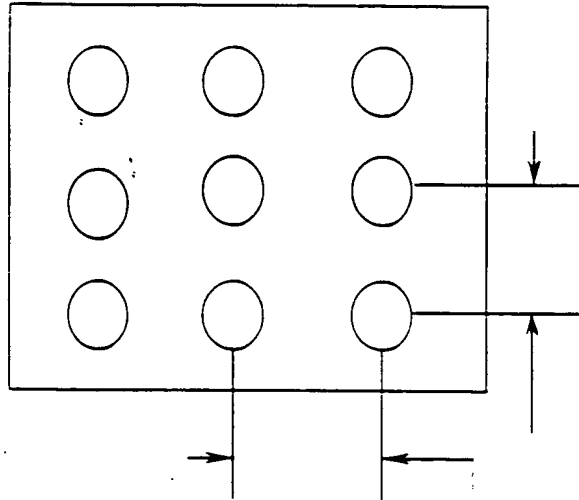


FIG-10A

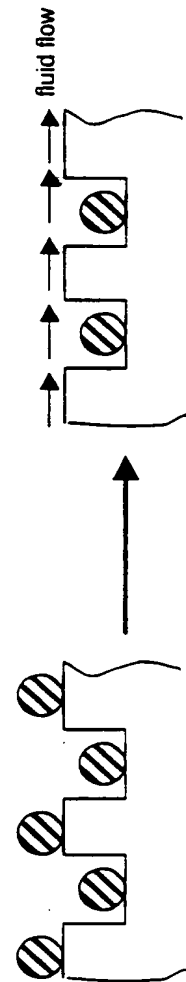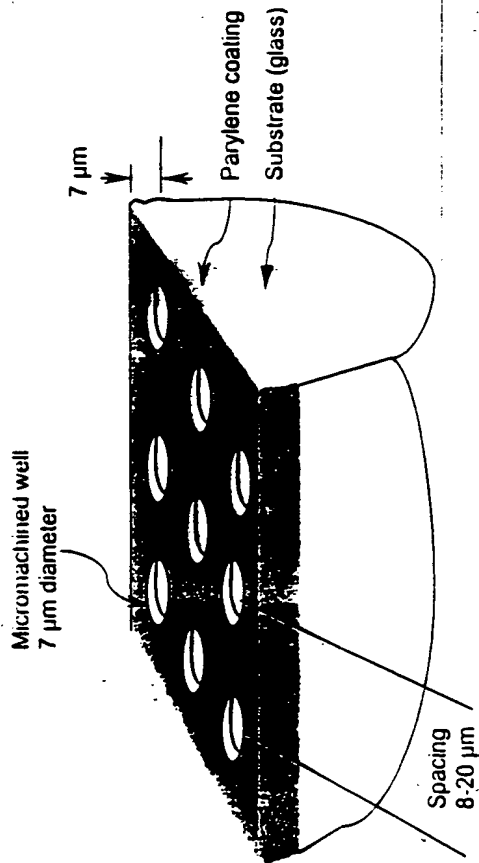

Wash away excess beads and image

Apply sample containing beads, some settle into wells

FIG-10C

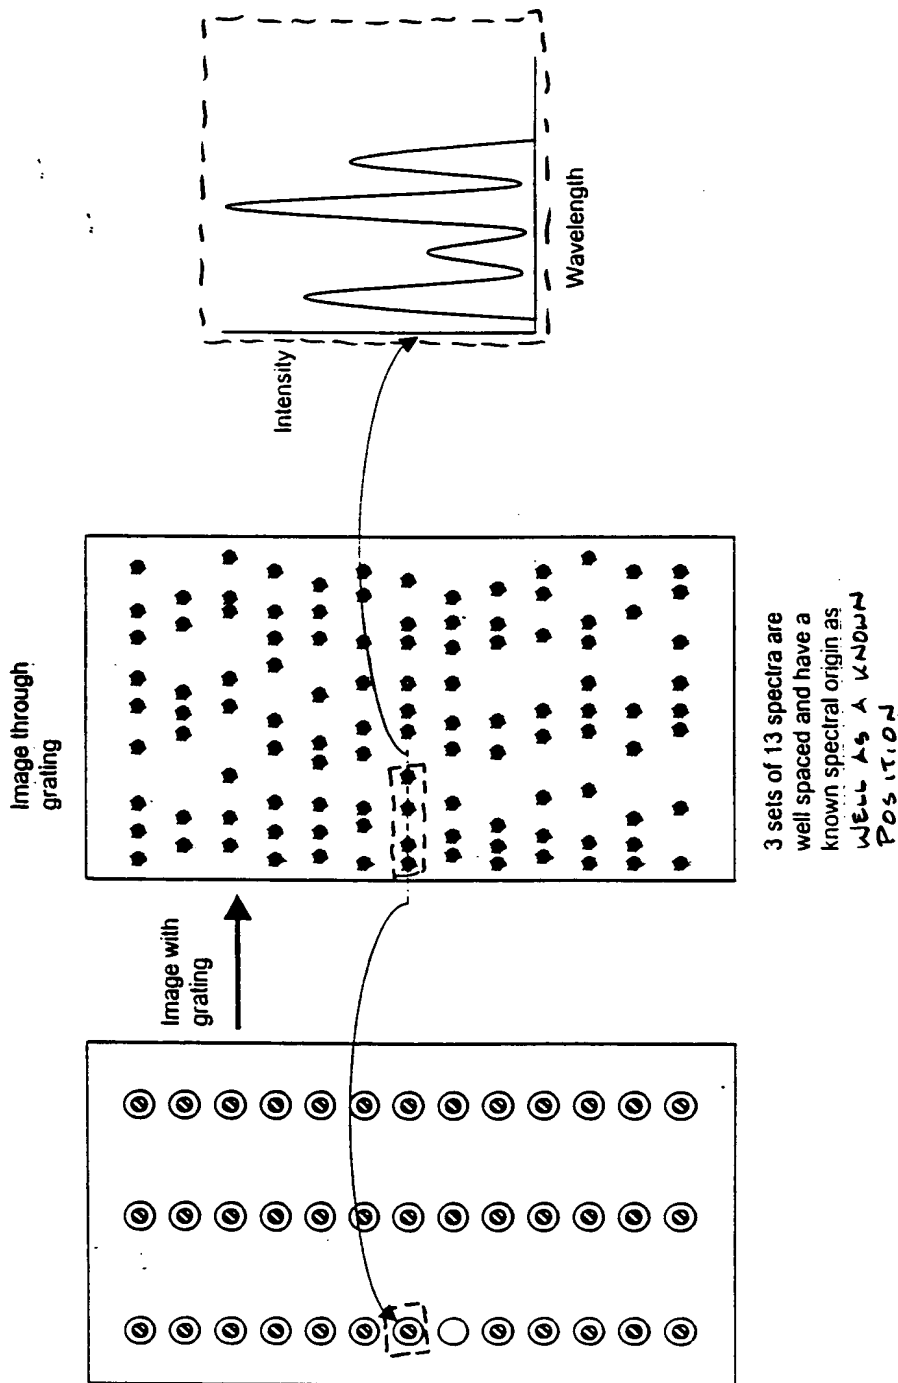


FIG. 11